
# FINGER TYPE SCRAPPER FOR RIB TOP BELT

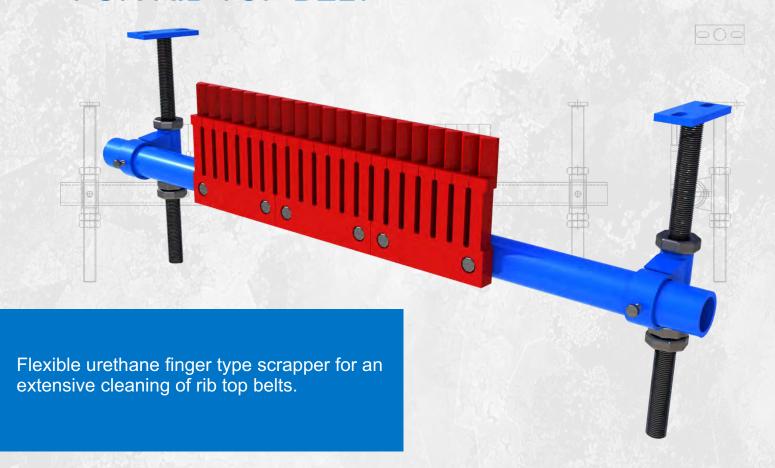

Finger type scrapper used to clean rib top belt up to 1/2" thick from sticky material. Usually installed behind drive pulley an ideally in the discharge chute.

Supplied with an heavy duty support for a very precise positioning of the blade with the belt. All the tensionner parts are powder coated for an extended life of the system.


Shall be installed perpendicularly to the belt

Blade sections are easily replacable using the screws

Available for differents belt width from 18 to 84 inches wide.



#### **DIMENSIONS AND INSTALLATION:**

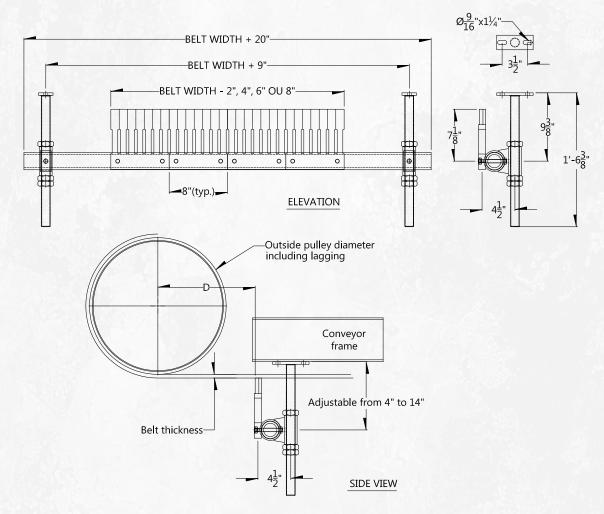

## TO ORDER:

PSF-xx-S

## Where:

xx : belt width (inches)S : Optionnal support

#### TYPICAL INSTALLATION







